
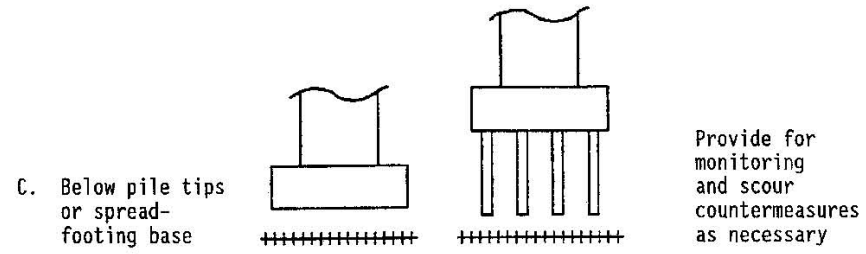
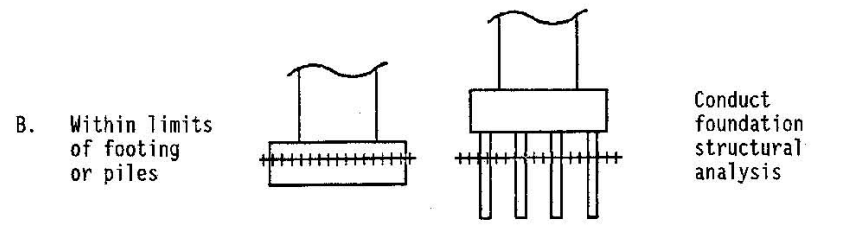


EXAMPLES:                      CALCULATED SCOUR DEPTH                      ACTION NEEDED

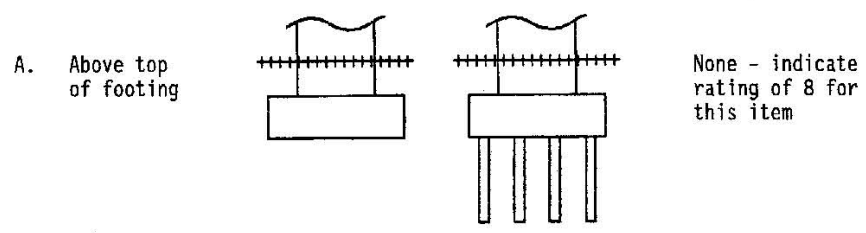

SPREAD FOOTING (NOT FOUNDED IN ROCK)                      PILE FOOTING

+++++ = Calculated scour depth